

Item # 37-0046



*Rush Creek*TM

9-GUN, 12 PISTOL CABINET WITH STORAGE



Tools Needed For Assembly:

Screwdriver

Drill

Assembly Tips:

If you are using an electric screwdriver for assembly, set it at low torque and do not over-tighten the hardware.

Care:

Apply lemon oil with a soft cotton cloth. Do not use products with silicone; these may cause damage to the finish. Do not allow the wood to come in contact with any type of paint remover.

CONNECTIONS:

Changes in temperature and humidity may cause the wood to dry out, which can cause the bolts to loosen. Check the bolts periodically to make sure they are still tight. DO NOT put your wood rack directly against hot radiators or other sources of heat. This may cause the wood to dry and crack.

Safety Recommendations:






 

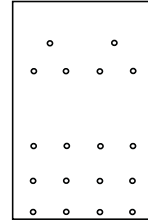

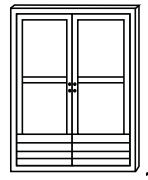

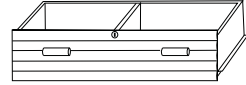
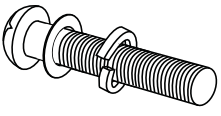
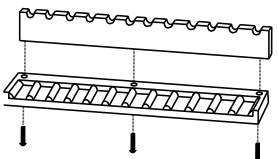
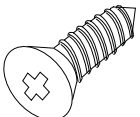
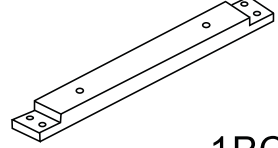
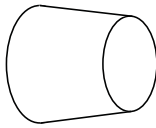

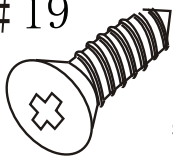
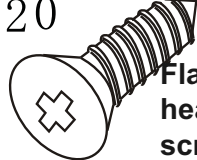
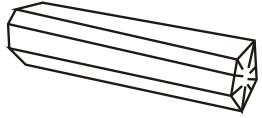
Keep the gun cabinet locked at all times for safety.

Store gun cabinet keys in a secure place that is out of reach for children.

Additional anchoring to the floor through the bottom of the cabinet is recommended.

**If you have any problems with your new product,
DO NOT RETURN IT TO THE STORE!
Please contact us at 1-866-815-4173,
or e-mail us at cs@rushcreeklogfurniture.com**

Parts List
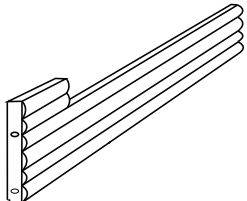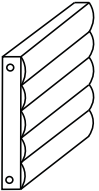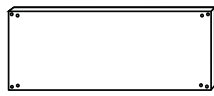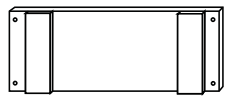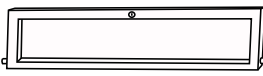
<p>#1 Side panel</p>  <p>2PCS</p>	<p>#2 Side panel for bottom cabinet</p>  <p>2PCS</p>	<p>#3 Top panel for bottom cabinet</p>  <p>1PC</p>	<p>#4 Bottom panel</p>  <p>1PC</p>
<p>#5 Pistol cabinet</p>  <p>1PC</p>	<p>#6 Barrel rest</p>  <p>1PC</p>	<p>#7 Butt plates panel</p>  <p>1PC</p>	<p>#8 Back panel</p>  <p>1PC</p>
<p>#9 Top panel</p>  <p>1PC</p>	<p>#10 Front door panel</p>  <p>1PC</p>	<p>#11 Door knob</p>  <p>2PCS</p>	<p>#12 Drawer</p>  <p>1PC</p>
<p>#13 Bolt</p>  <p>47 PCS</p>	<p>#14 Pistol rest</p>  <p>1PC</p>	<p>#15 Flat head screw</p>  <p>20*3 mm 20 PCS</p>	<p>#16 Back panel support</p>  <p>1PC</p>
<p>#17 Cap</p>  <p>22PCS</p>	<p>#18 Flat head screw</p>  <p>20*3.5mm 4PCS</p>	<p>#19 Flat head screw</p>  <p>35*4mm 4 PCS</p>	<p>#20 Flat head screw</p>  <p>40*4 mm 2PCS</p>
<p>#21 Anchor</p>  <p>35*6mm 2PCS</p>			

Step 1:

Unpack the carton on a smooth surface. Check carefully to ensure that all parts are included.

Attach the side panels (#1) to the top panel for the bottom cabinet (#3) using bolts (#13).

Connect the bottom cabinet side panel


(#2) to the top panel for the

bottom cabinet (#3). Attach the assembled piece to

the bottom panel


(#4) with bolts

(#13).

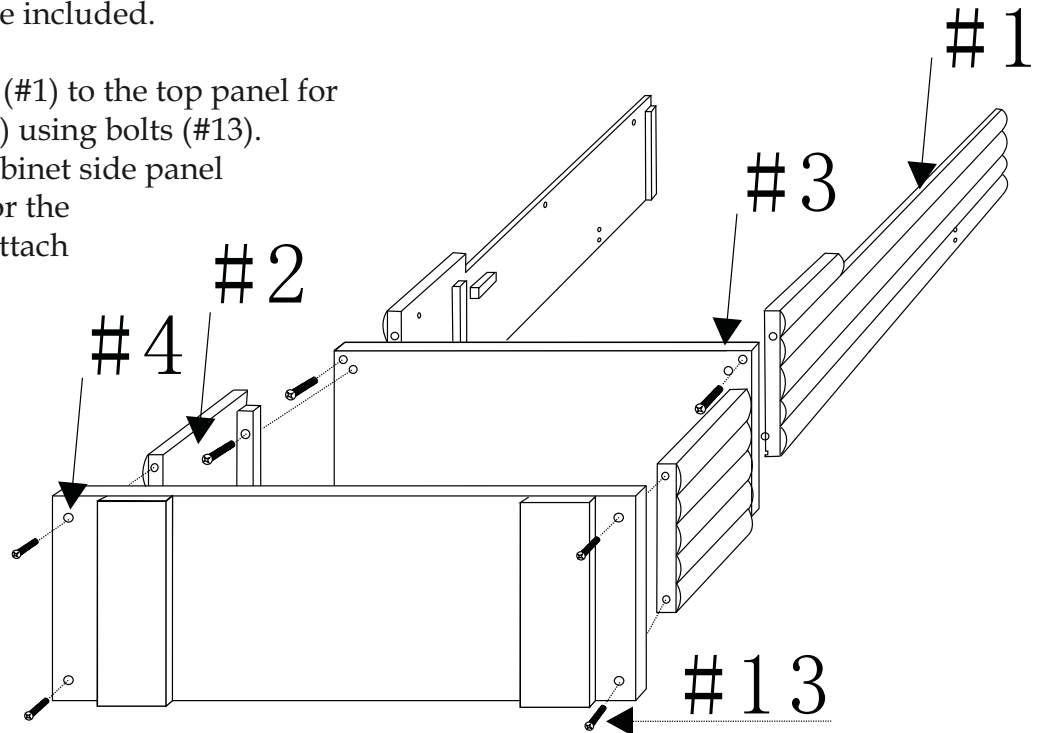


Step 2:

Place the pistol cabinet (#5) in the middle of the gun cabinet. Attach the barrel rest (#6) to the side panels using bolts (#13).

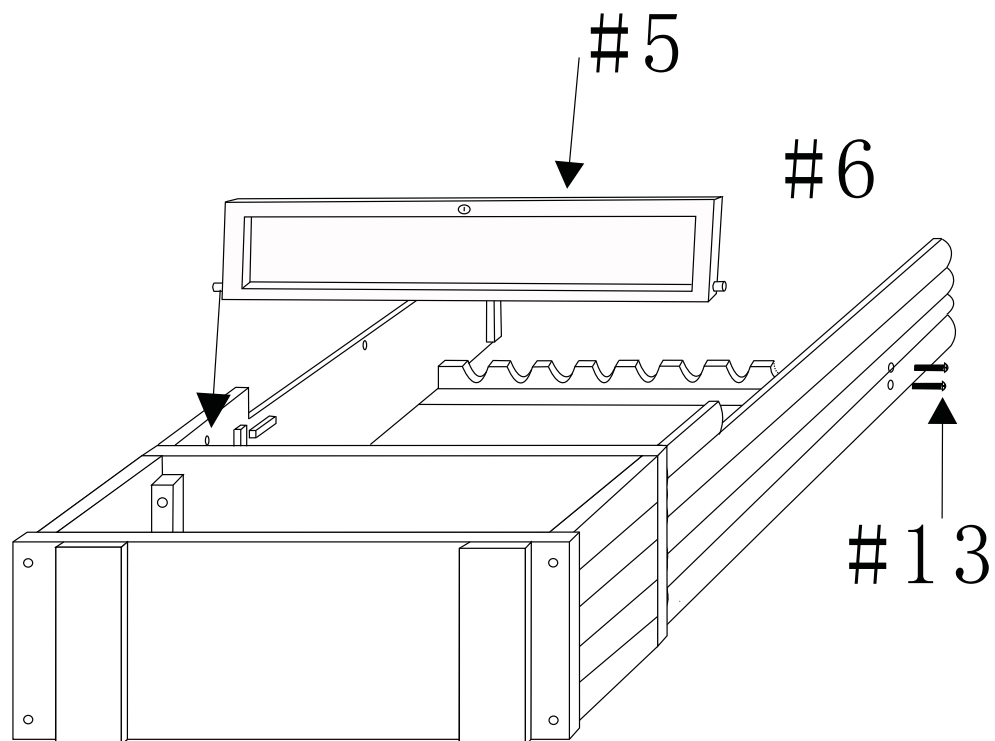


Step 3:

Insert the butt plate panel (#7).

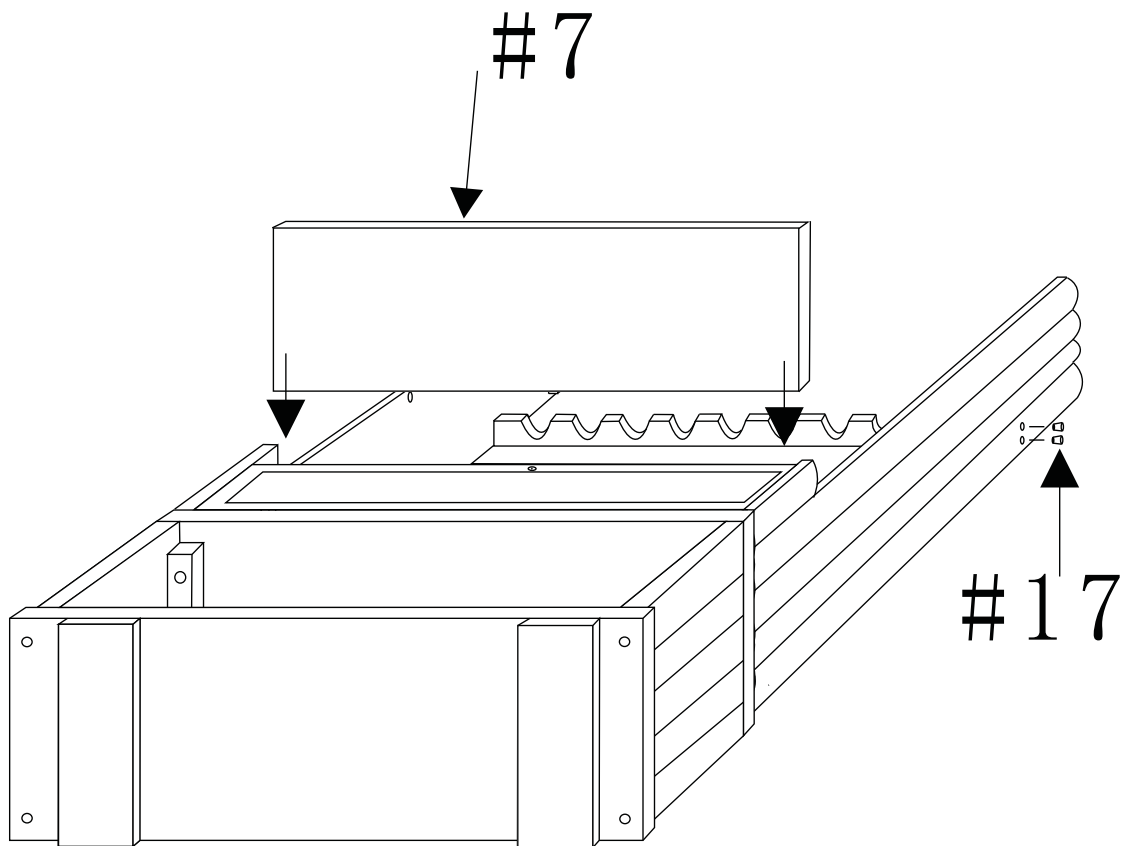


Step 4:

Slide and push the back panel (#8) between the two side panels.

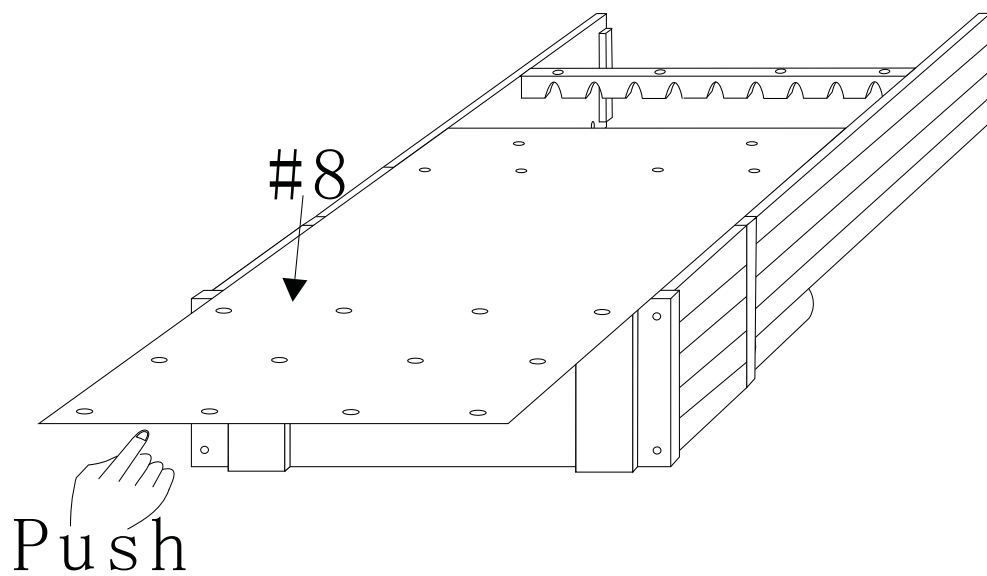


Step 5:

Use bolts (#13) to tighten the top panel (#9).

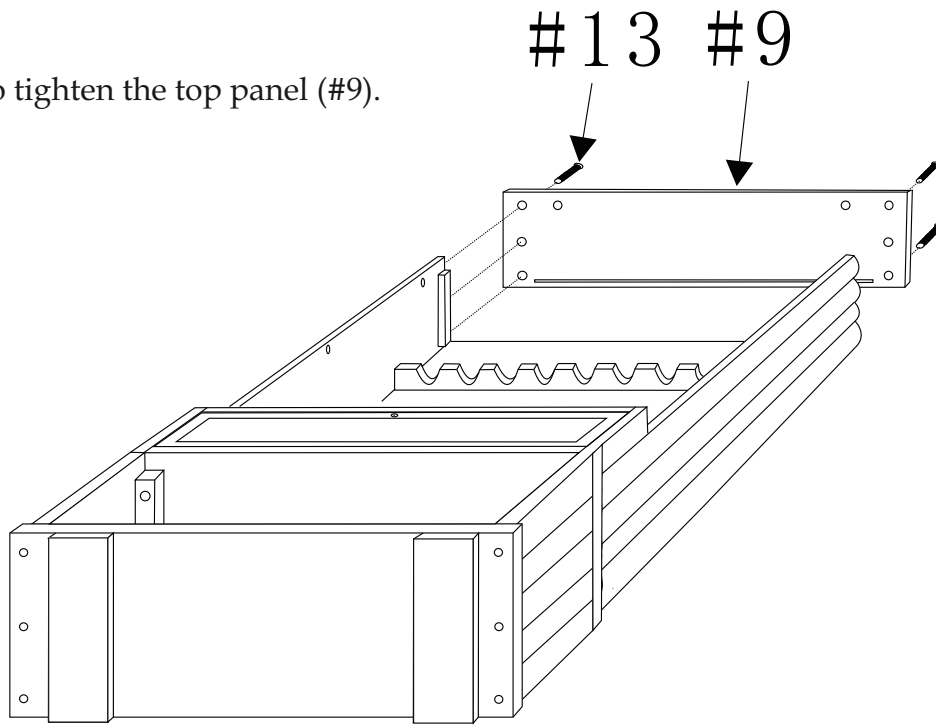

Step 6:

At least two people are needed to carefully lift the cabinet to an upright position. Use flat head screws (#18) to screw the back panel support (#16) to the back panel. Use flat head screws (#15) to screw the back panel to the cabinet.

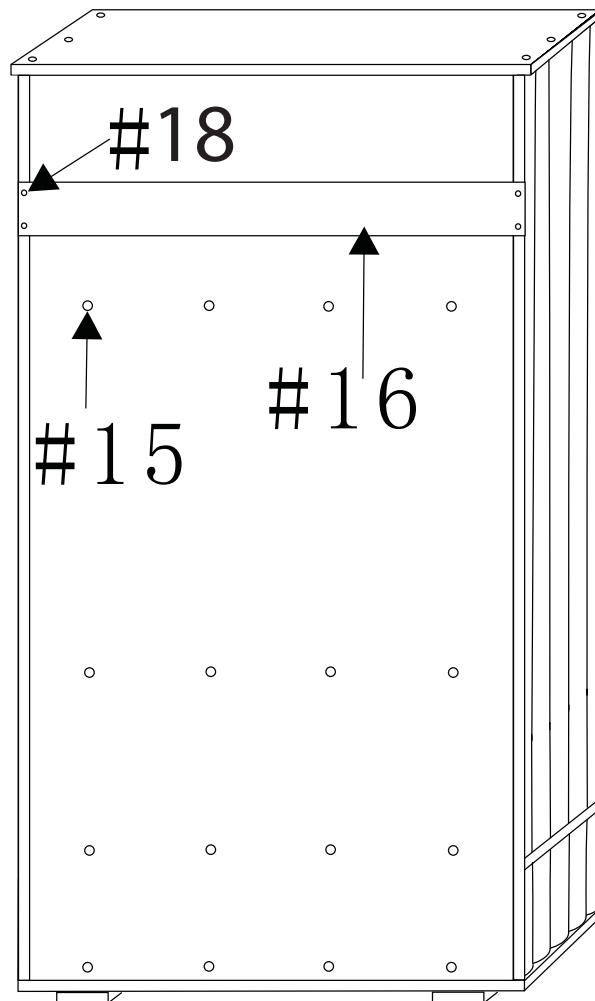


Step 7:

Install the front door panel (#10) to the cabinet; tighten bolts (#13) into the holes on the door panel. Insert the pistol rest (#14) into the pistol cabinet; insert the drawer (#12) into the bottom section.

Use flat head screws (#19) to screw the door knob (#11) to the door.


Use flat head screws (#20) with anchors (#21) to secure the cabinet to the wall.

Fill the predrilled holes with a cap (#17) when the assembly is complete.

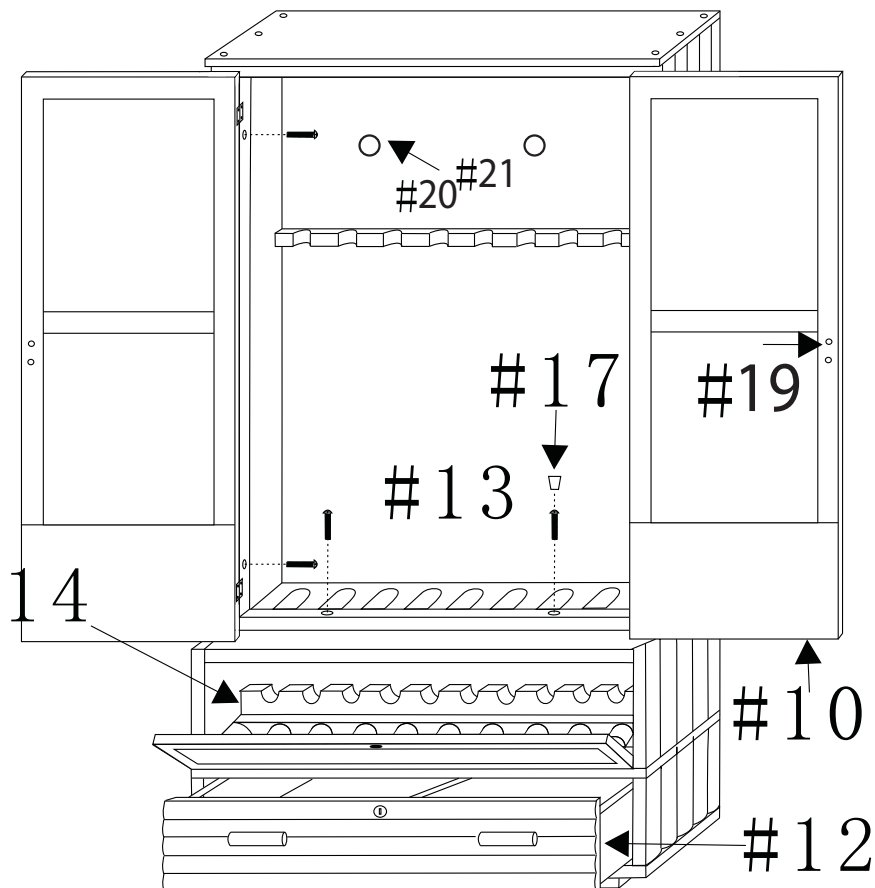

Step 8:

The gun cabinet is fully assembled.

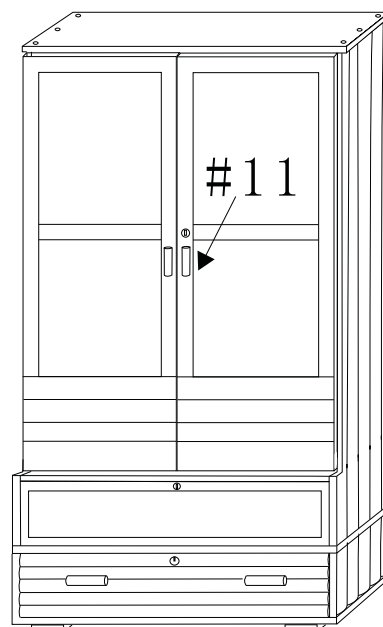

Be sure to check out all the exciting products *Rush Creek*
has to offer. Visit our web site at:

www.rushcreeklogfurniture.com



Warranty:

All of our products come with a one year warranty on all parts.

Manufacturer Defects:

Defective parts will be replaced at no cost to you. Please send an e-mail to cs@rushcreeklogfurniture.com including photos of the defective part(s) and we will send replacements. PLEASE NOTE: Cracks in logs are not defects. They may develop during the log drying process and do not affect the stability of the piece in any way, and add to the rustic appeal of your log furniture.

If your product needs service, please be advised that Rush Creek reserves the right to decline service when the product is found to be excessively worn, altered in any way, or when damage is caused by acts other than defective workmanship or materials. This warranty is void if the product has been subject to abuse. For service under this warranty, please contact Rush Creek. Please provide your receipt as proof of purchase.

Rush Creek
Aurora, IL 60504
www.rushcreeklogfurniture.com
1-866-815-4173

Rush Creek is a trademark owned by Triumph Sports USA
©2008 Triumph Sports USA. All Rights Reserved.