


Notes:

Best Location

1. Choose a wall that does not have wiring or plumbing behind the drywall.
2. Use a stud finder to locate the edges of the 2x4's.
3. The distance between the 2 inner edges of the 2x4's should be approximately 14½ ".
4. The hole size to cut in the wall will be 50 ½ " x 14 ½ ".
5. Make sure the bottom line is above the baseboard a minimum of 1 ½".
6. Use a drywall saw to cut out the drywall. Remove the cutout portion of the drywall from the wall.

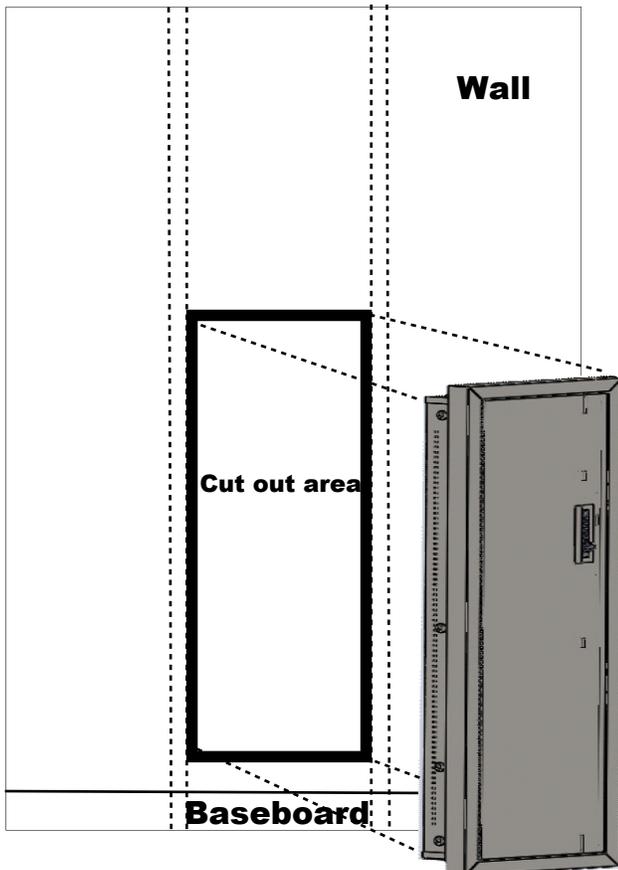

Installation:

1. After the install hole has been cut and all the excess drywall removed, insert the Closet Vault II into the cavity.
2. Open the door and drill 4 pilot holes into the 2x4's using any of the 8 predrilled holes as a guide on inside sides of the CVII using a 7/32" drill bit to accommodate the 4 supplied 1/4" lag bolts.
3. Secure the CV II by screwing in the lag bolts with a socket and a ratchet.
4. The CV II is now in place and should be flush and straight in the wall.
5. Next reprogram the lock with the directions on the reverse side of this instruction sheet.

To access your lock for setting a new code simply pull off the lock cover. The lock cover is attached with two strips of Velcro.


After the code has been changed carefully reattach the cover.




Pull lock cover off to access lock "L-Tab"

Velcro

L-Tab

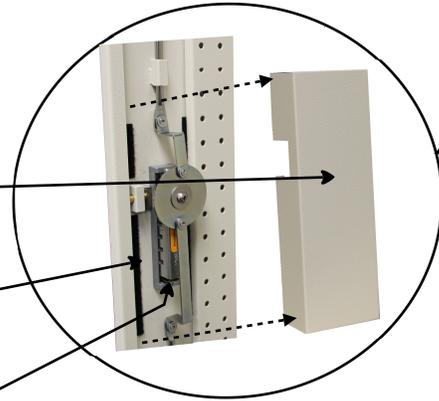

OPERATING YOUR SIMPLEX® PUSHBUTTON LOCK

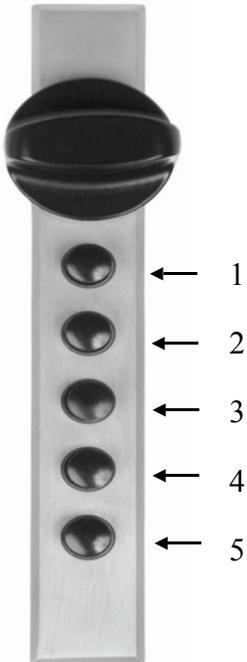

Your Simplex Cabinet Lock is presently set with a combination of: First push #2 and #4 together, and then #3. Make a habit of turning the knob **LEFT** (counter-clockwise) before pushing the combination. Should anyone have attempted an improper combination, this action clears off such an attempt and reactivates the buttons.

TO OPEN:

- 1) Turn knob **LEFT** (counter-clockwise) to active all buttons.
- 2) Push proper buttons in present order for the combination.
- 3) Turn knob **RIGHT** (clockwise) to open.

TO LOCK:

Turn knob **LEFT** (counter-clockwise) until it stops.

TO CHANGE YOUR COMBINATION:

You may easily change to a new combination, using one, all five, or any number of buttons you wish in any order. Two or more buttons may be pushed at one time as part of your new combination. Simple two and three button combinations are easy to remember and still provide top security.

Note: a particular button can be pushed only once in establishing a new combination. **RECORD YOUR NEW COMBINATION ON THE BACK OF THIS FOLDER AND KEEP IN A SAFE PLACE.**

- 1) Open the door or drawer and relock your lock
- 2) Press the correct buttons in the proper order for your **EXISTING** combination.
- 3) On the back side of the lock there is a notch in the plate (at the opposite end from the bolt assembly). With a pencil tip, paper clip, etc., push the slide sideways into the lock as far as it will go. (In Models SM and RM this slide is completely exposed.)
- 4) Turn the knob **LEFT** (counter-clockwise) to "clear-out" the existing combination.

RECORD NEW COMBINATION HERE:

1)