



In Wall Safe

Item No.: 75410

Ext. Dimensions: 22.0"H x 16.25"W x 4.0"D

Int. Dimensions: 18.7" x 14.1" x 3.78"

Weight: 35 Lbs

Power: 4 AA batteries (not included)

In Wall Long Gun Safe

Item No.: 75411

Ext. Dimensions: 44.0"H x 16.25"W x 4.0"D

Int. Dimensions: 40.7" x 14.13" x 3.78"

Weight: 55 Lbs

Power: 4 AA batteries (not included)



Customer Service: PO Box 1848, Grand Island, NE 68802-1848
1-877-214-4470 | Email: info@snapsafe.com

Owner's Manual In Wall Safes

In Wall Safe
Item No. 75410

In Wall Long Gun Safe
Item No. 75411

INCLUDES

One – Steel Security Safe

One – Operation Manual

Two – Override Access Keys

**Four – “AA” Batteries (sold separately)*

SETUP

OPEN SAFE WITH OVERRIDE KEY



1. Insert and rotate override key to unlock.
2. Turn knob to right and open the safe door.
3. Do not store keys in safe.

INSTALL BATTERIES

1. Remove the battery cover inside the door.
2. Insert 4 AA batteries and replace the battery cover.
3. Do not close the door before testing digital lock.

PROGRAM FIRST PASSCODE

1. Open safe door with override key.
2. Press the red reset button inside the door. The safe will beep twice and the yellow light on the keypad will turn on.
3. Enter new passcode (3 to 8 digits) within 10 seconds followed by "A".
4. The safe will beep twice and the yellow light will turn off. With the door open, verify the correct code is programmed by entering code followed by "A". The motor should activate when the correct code is entered. If not, repeat steps above.

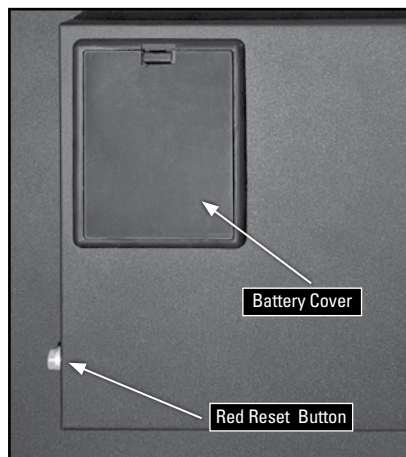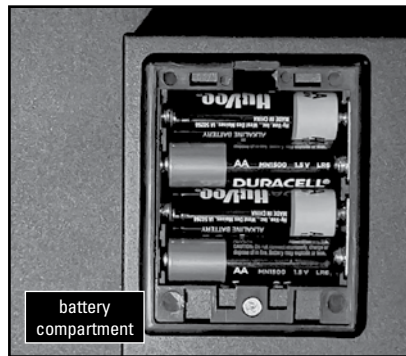

PROGRAM SECOND PASSCODE

1. Keep door open.
2. Press "0" on the keypad twice, then press the red reset button inside the door. The safe will beep 3 times and the yellow light turns on.
3. Enter new passcode (3 to 8 digits) within 10 seconds followed by "B".
4. The safe will beep twice and the yellow light will turn off. With the door open, verify the correct code is programmed by entering code followed by "B". The motor should activate when the correct code is entered. If not, repeat steps above.

OPERATION

TO OPEN THE SAFE

1. Enter either first or second passcode followed by "A" or "B".
2. The safe will beep twice and the green light turns on.
3. Rotate the knob to the right and open the door.

TO CLOSE THE SAFE

1. Close the door and hold it in the closed position.
2. Rotate the knob to left to engage the lock bolts to lock the safe.

LOW BATTERY WARNING

If the battery power becomes low, both the green and red lights on the keypad will illuminate after a code is entered. Replace batteries immediately with quality batteries to ensure proper operation.

SECURITY LOCKOUT PERIODS

1. If the wrong code is entered three times, the keypad will beep and become deactivated for 20 seconds.
2. If the wrong code is entered an additional three times, the keypad will beep and become deactivated for 5 minutes.