

## **Installing and Replacing Entry Keypad Battery**

Install only a high-quality alkaline battery in the compartment in the back of the Entry Keypad following the steps below.

- Remove Entry Keypad. Slide it up and carefully pull it away from the vault door. (Fig.1)
  *Note:* Do not pull on the Keypad with too much force as to damage the cable.
- 2. Snap new battery into the connector clip, and slide it into the battery compartment top down so that the wires will not be pinched between the battery and the vault door. (Fig.2)
- **3.** Fold the connection cable inside the keypad. (Fig.3)
- 4. Position the keypad over the mounting screws, and slide it down into position.
  - *Note:* Make sure the connection cable is not trapped between the keypad and the door, or rubs or tangles on the mounting screws. (Fig.4)

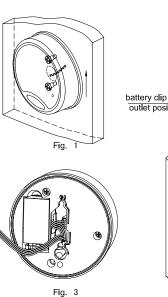

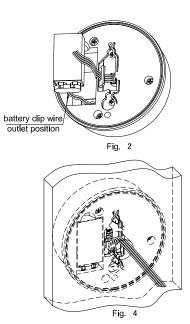





For all Customer Service questions call toll free: 1-877-214-4470 Visit us at WWW.Snapsafe.com